


2. SETUP

1. GENERAL SETTINGS

Used for language selection and the on/off settings of operation sounds and automatic screen change, etc.


- 1 Press the "MENU" button on the Remote Touch.

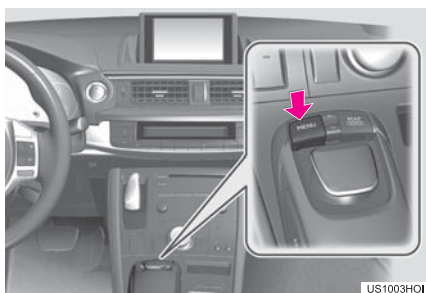


- 2 Select "Setup".



- 3 Select "General".




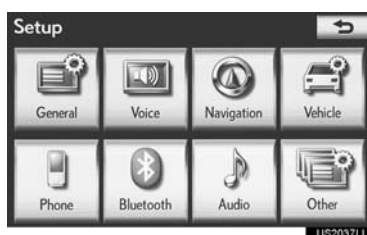


- 4 Select the items to be set.

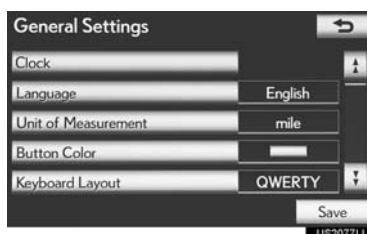

- 5 Select "Save".

SCREENS FOR GENERAL SETTINGS

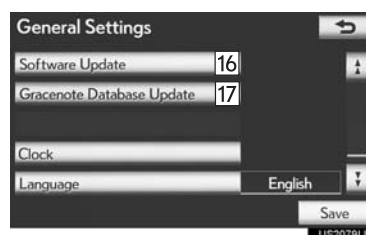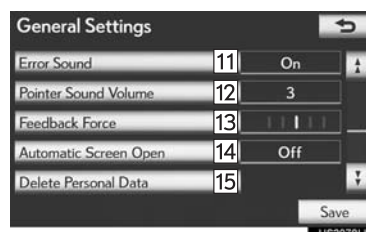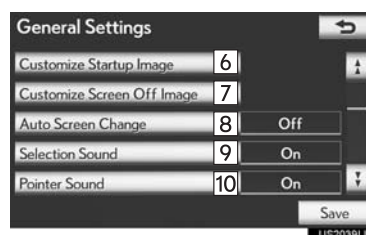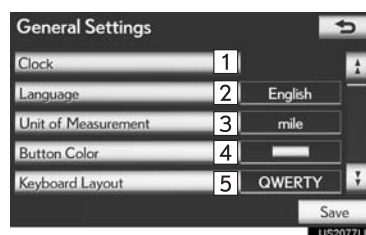

- On this screen, the following functions can be performed:


No.	Function	No.	Function
1	Select to change the time zone and select "On" or "Off" for daylight saving time and automatic adjustment of the clock. (See "CLOCK SETTINGS" on page 54.)	9	Select to turn the selection sounds "On" or "Off".
2	Select to change the language. (See "SELECTING A LANGUAGE" on page 56.)	10	Select to turn the pointer sounds "On" or "Off".
3	Select to change the distance unit. (See "UNIT OF MEASUREMENT" on page 56.)	11	Select to turn the error sounds "On" or "Off".
4	Select to change the screen button color. (See "SELECTING A BUTTON COLOR" on page 57.)	12	Select to adjust the pointer sound volume. (See "POINTER SOUND VOLUME SETTINGS" on page 62.)
5	Select to change the keyboard layout. (See "SELECTING A KEYBOARD LAYOUT" on page 57.)	13	Select to adjust the strength of the pull from the buttons to the pointer. (See "SETTING A FEEDBACK FORCE" on page 62.)
6	Select to customize the startup image. (See "CHANGING THE STARTUP IMAGE" on page 58.)	14	Select to set automatic screen open "On" or "Off". If "On" is selected, the screen will automatically open when the "POWER" switch is in ACCESSORY or ON mode.
7	Select to customize the screen off image. (See "CHANGING THE SCREEN OFF IMAGE" on page 60.)	15	Select to delete personal data. (See "DELETING PERSONAL DATA" on page 63.)
8	Select to set automatic screen changes from the audio/air conditioning control screen to the previous screen to "On" or "Off". If "On" is selected, the screen will automatically return to the previous screen from the audio/air conditioning control screen after 20 seconds.	16	Select to update program versions. For details, contact your Lexus dealer.
		17	Select to update gracenote database versions. For details, contact your Lexus dealer.

2. SETUP

CLOCK SETTINGS

Used for changing time zones and the on/off settings of daylight saving time and automatic adjustment of the clock.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Clock”.

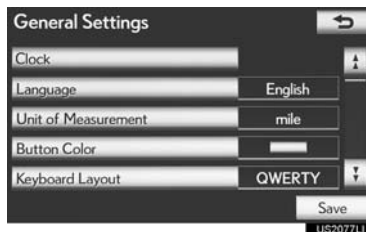

- 4 Select the items to be set.



- On this screen, the following functions can be performed:

No.	Function
1	Select to change the time zone. (See “TIME ZONE” on page 55.)
2	Select “On” or “Off” for daylight saving time.
3	Select “On” or “Off” for automatic adjustment of the clock.
4	When “Auto adjust clock” is turned “Off”, the clock can be manually adjusted. (See “MANUAL CLOCK SETTING” on page 55.)

- 5 Select “Save”.


■ TIME ZONE

A time zone can be selected and GMT can be set.


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Clock" on the "General Settings" screen.
- 4 Select "Time Zone".



- 5 Select the desired time zone.

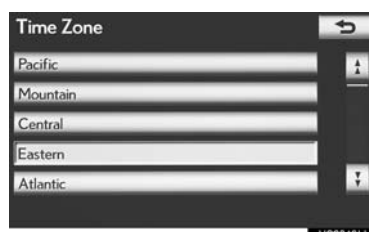

- If "Other" is selected, the zone can be adjusted manually. Select "+" or "-" to adjust the time zone and then select "OK".

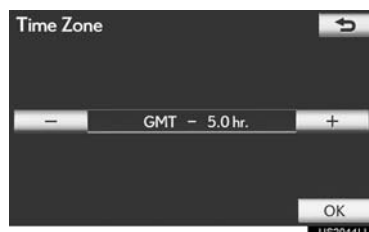

- 6 Select "Save".

■ MANUAL CLOCK SETTING

When "Auto Adjust Clock" is turned "Off", the clock can be manually adjusted.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Clock" on the "General Settings" screen.
- 4 Select the items to be set.



Screen button	Function
"Hours" "+", "-"	Select "+" to set the time forward one hour and "-" to set the time back one hour.
"Minutes" "+", "-"	Select "+" to set the time forward one minute and "-" to set the time back one minute.
"Minutes" ":00"	Select to round to the nearest hour*.

*e.g. 1:00 to 1:29 → 1:00
1:30 to 1:59 → 2:00


- 5 Select "Save".

2. SETUP


SELECTING A LANGUAGE

The language can be changed.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Language"**.

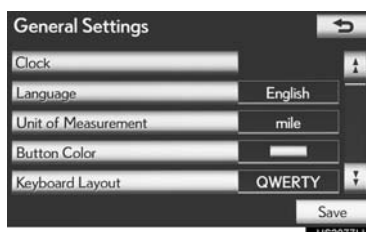

- 4 Select the desired screen button.

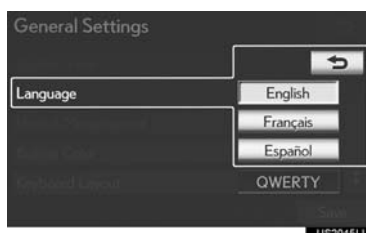


- 5 Select **"Yes"**.
 - The previous screen will be displayed.
- 6 Select **"Save"**.


UNIT OF MEASUREMENT

Distance unit can be changed.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Unit of Measurement"**.

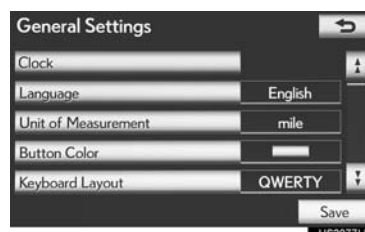

- 4 Select **"km"** or **"mile"**.

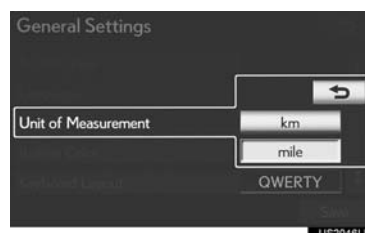

- The previous screen will be displayed.


- 5 Select **"Save"**.

- This function is available only in English or Spanish. To change language, see **"SELECTING A LANGUAGE"** on page 56.


SELECTING A BUTTON COLOR

The color of the screen buttons can be changed.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Button Color"**.

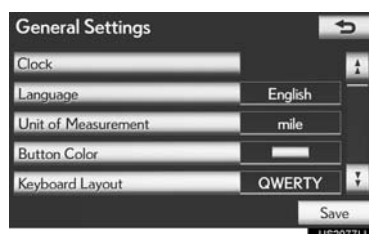

- 4 Select the desired screen button color.

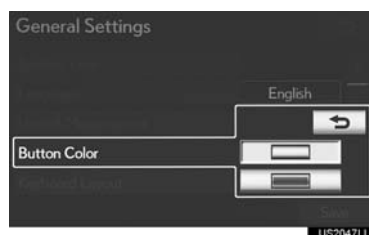


- The previous screen will be displayed.

- 5 Select **"Save"**.

SELECTING A KEYBOARD LAYOUT

Keyboard layout can be changed.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Keyboard Layout"**.

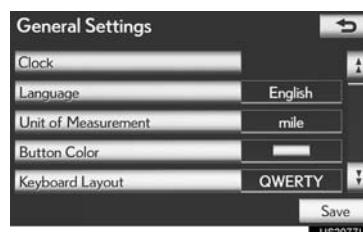

- 4 Select **"ABC"** or **"QWERTY"** of "Keyboard Layout" to change the keyboard layout.




- The previous screen will be displayed.

- 5 Select **"Save"**.


2. SETUP

■ LAYOUT TYPE

▶ “ABC” type

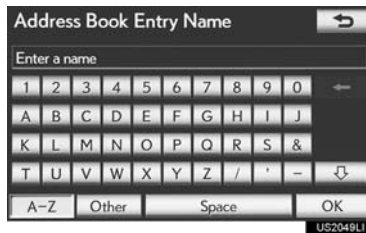

▶ “QWERTY” type

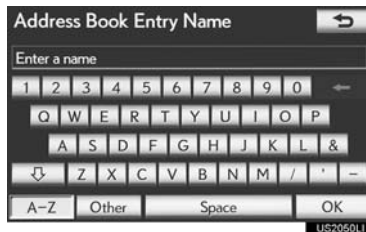

CHANGING THE STARTUP IMAGE

When the “POWER” switch is in ACCESSORY or ON mode, the initial screen will be displayed.


An image can be copied from a USB memory and used as the startup image. (For information regarding the startup image, see “INITIAL SCREEN” on page 32.)

INFORMATION


- When saving the images to a USB, name the folder that the startup image is saved to “StartupImage” and name the folder that the screen off image is saved to “DisplayOffImage”. If these folder names are not used, the navigation system cannot download the images. (The folder names are case sensitive.)
- The images file extension is JPG or JPEG.
- The images file name, including the file extension, can be up to 32 characters.
- Image files of 10 MB or less can be saved.
- Up to 3 images can be downloaded.

■ TRANSFERRING DATA

- 1 Press the lid, open the cover and connect a USB memory.

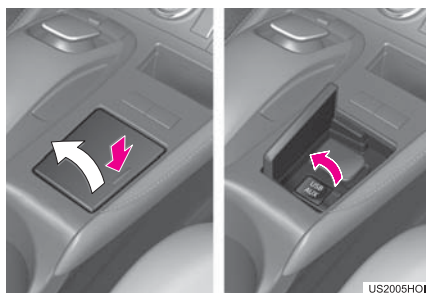

- Turn on the power of the USB memory if it is not turned on.
- 2 Press the "MENU" button on the Remote Touch, then select "Setup".
 - 3 Select "General" on the "Setup" screen.
 - 4 Select "Customize Startup Image".

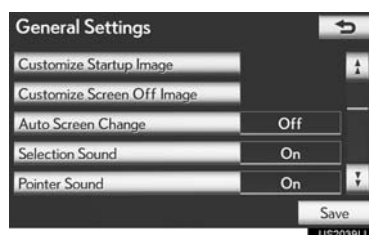

- 5 Select "Transfer".



- 6 Select "Yes".

■ SETTING THE STARTUP IMAGE

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Customize Startup Image" on the "General Settings" screen.
- 4 Select the desired image.



- 5 Select "Save".


2

BASIC FUNCTION

2. SETUP

■ DELETING TRANSFERRED IMAGES

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Customize Startup Image"** on the "General Settings" screen.
- 4 Select **"Delete All"**.

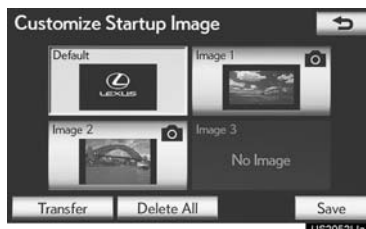


- 5 Select **"Yes"**.

■ CHANGING THE SCREEN OFF IMAGE


Select **"Screen Off"** to turn off the screen. An image can be copied from a USB memory and can be set to display when **"Screen Off"** is selected. (For more information on **"Screen Off"**, see **"SCREEN ADJUSTMENT"** on page 39.)

■ TRANSFERRING DATA

- 1 Press the lid, open the cover and connect a USB memory.

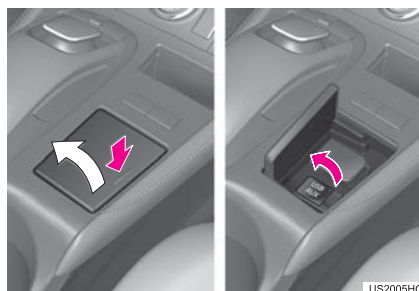

- Turn on the power of the USB memory if it is not turned on.
- 2 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
 - 3 Select **"General"** on the "Setup" screen.
 - 4 Select **"Customize Screen Off Image"**.

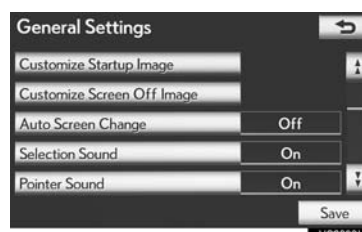


- 5 Select **"Transfer"**.



- 6 Select **"Yes"**.

■ SETTING THE SCREEN OFF IMAGE


- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Customize Screen Off Image"** on the "General Settings" screen.
- 4 Select the desired image.

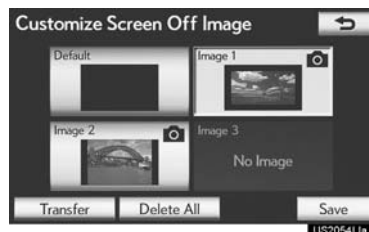

- 5 Select **"Save"**.

■ DELETING TRANSFERRED IMAGES

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"General"** on the "Setup" screen.
- 3 Select **"Customize Screen Off Image"** on the "General Settings" screen.
- 4 Select **"Delete All"**.

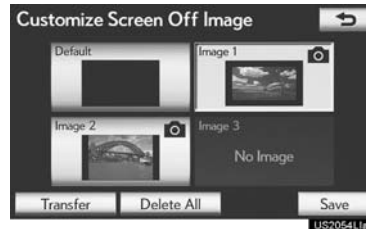

- 5 Select **"Yes"**.

2


BASIC FUNCTION

2. SETUP


POINTER SOUND VOLUME SETTINGS

The pointer sound volume can be adjusted.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Pointer Sound Volume”.

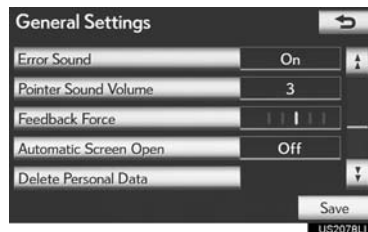

- 4 Select the desired button.

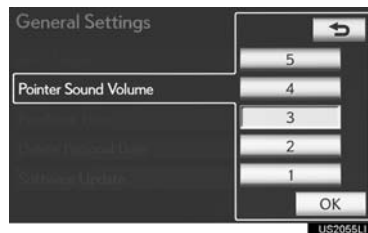


- 5 Select “OK”.
- 6 Select “Save”.


SETTING A FEEDBACK FORCE

When the pointer moves close to a button, it will be automatically pulled onto that button. The strength of this pull can be adjusted.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Feedback Force”.

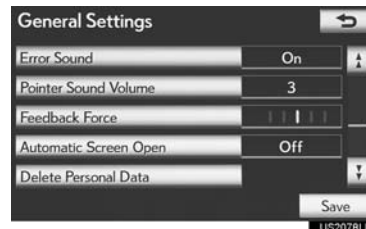


- 4 Select “+” or “-”.

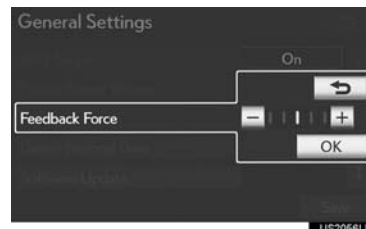


- 5 Select “OK”.
- 6 Select “Save”.

DELETING PERSONAL DATA

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Delete Personal Data".

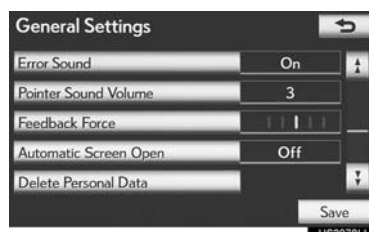

- 4 Select "Delete".

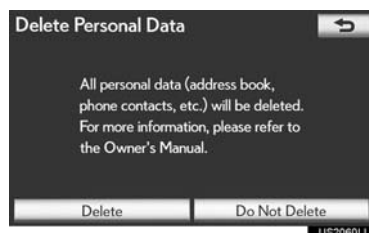

- 5 Select "Yes".

- The following personal data can be deleted or returned to their default settings:

- Maintenance conditions
- Maintenance information off setting
- Address book
- Areas to avoid
- Previous points
- Route guidance
- Route trace
- Phonebook data
- Call history data
- Speed dial data
- Bluetooth® phone data
- Phone sound settings
- Phone display settings
- Message settings
- Audio setting
- Bluetooth® audio setting
- Startup image data
- Screen off image data
- Downloaded Apps

INFORMATION

- This function is not available while driving.

2


BASIC FUNCTION

2. SETUP

2. VOICE SETTINGS

Voice guidance etc. can be set.


- 1 Press the "MENU" button on the Remote Touch.

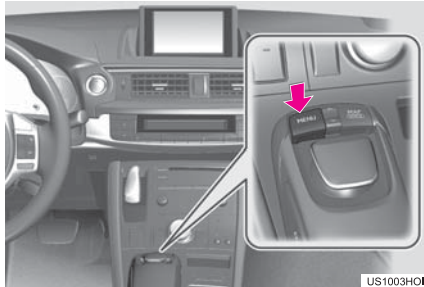


- 2 Select "Setup".



- 3 Select "Voice".


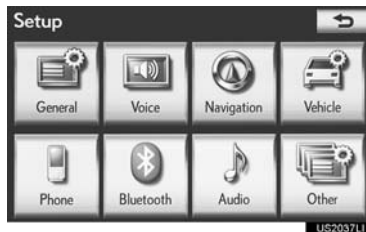


- 4 Select the items to be set.

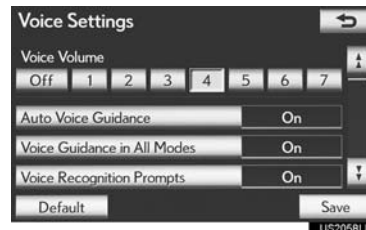

- 5 Select "Save".

SCREEN FOR VOICE SETTINGS

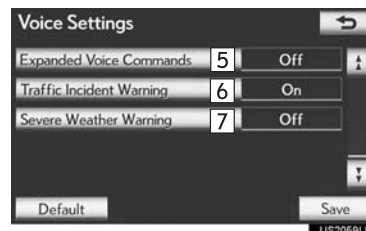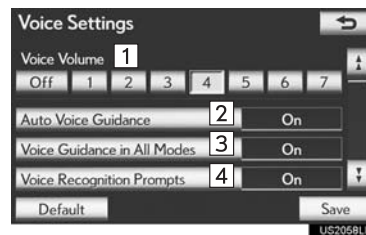

- On this screen, the following functions can be performed:


No.	Function
1	The voice guidance volume can be adjusted or switched off. (See "VOICE VOLUME" on page 65.)
2	Voice guidance during route guidance can be set to "On" or "Off".
3	Voice guidance during audio/video and/or air conditioning system use can be set to "On" or "Off".
4	Voice recognition prompts can be set to "On" or "Off". This setting can also be changed on the "Shortcut Menu" screen. (See page 306.)
5	When "On" is selected, the audio/video and air conditioning systems can be operated using voice commands.
6	When using the traffic information function, voice guidance can be set to "On" or "Off". (See "TRAFFIC INCIDENT WARNING" on page 66.)
7	When using the XM NavWeather™ function, the severe weather warning can be set to "On" or "Off".

- To reset all setup items, select "Default".

VOICE VOLUME

The voice guidance volume can be adjusted or switched off.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Voice" on the "Setup" screen.
- 3 Select the desired level by selecting the appropriate number.

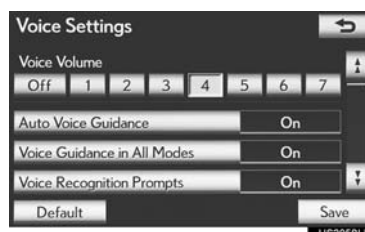

- If voice guidance is not needed, select "Off" to disable the feature.
- 4 Select "Save".


BASIC FUNCTION

2. SETUP

TRAFFIC INCIDENT WARNING

Traffic congestion information can be received via voice guidance while being guided to the desired destination.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Voice” on the “Setup” screen.
- 3 Select “On” of “Traffic Incident Warning”.

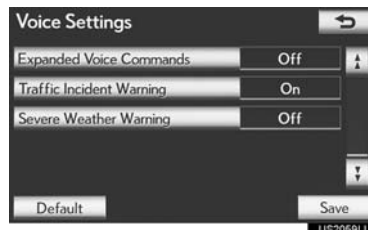

- 4 Select “Save”.

INFORMATION

- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate. (See page 340.)

